

014024 Recommended Installation, Maintenance and Inspection Instructions

NPT RAINER KIT

NPT Strainer Kit

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN A READILY ACCESSIBLE LOCATION

Note: If used for aviation fueling, the nozzle hold-open clip must be removed.

INSTALLATION INSTRUCTIONS

- 1. Turn off dispenser and relieve line pressure.
- 2. Use pipe thread sealant (not Teflon® tape) approved for aviation and jet fuel on male threads.
- 3. Tighten approximately 1 or 2 turns past hand tight-do not overtighten.
- 4. Follow installation instructions to install nozzle onto dispenser.

TESTING / MAINTENANCE / INSPECTION



Daily

Check for loose spouts.

Monthly



- Check spout tip should be in round and sensing port should be clear of debris.
 - •Check "remove after" date on the nozzle.
- All maintenance and inspection activities must be logged using the serial number of the individual product.
- Apply city, state, or federal testing regulations as appropriate.

ANY TEST / INSPECTION
FAILURE REQUIRES IMMEDIATE
EQUIPMENT REPLACEMENT OR
REMOVAL FROM SERVICE.
MADE IN THE USA



ALWAYS ADHERE TO INSTALLATION / USAGE INSTRUCTIONS AND WARNINGS.

Improper use may result in injury, damage, or hazardous spill.





 
SHOCK OR INJURY TO PERSON:



- · Use of equipment is at individuals' own risk.
- · Always abide and adhere to city, state, and federal regulations regarding use and installation of dispensing equipment.
- Always follow the product manufacturer's installation & maintenance instructions.



- Always turn off all power to dispenser during maintenance and inspection activities.
- Always relieve pressure from system prior to performing maintenance activities.
- · Always check continuity after installation using a megohmeter (Refer to PEI RP 400 for details).





Always report leaks / spills / accidents to appropriate authorities.

 


- Always wear appropriate safety equipment during maintenance activities.
- Always have appropriate fire extinguishing equipment within 5 ft / 1.5 m of dispensers.
- Always use pipe sealant approved for gasoline service.



GENERAL WARNINGS / INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC

- Always discharge static electricity before using or servicing equipment by touching a metal part of the dispenser before and after fueling vehicle.
- - Never smoke within 20 ft / 6.1 m of dispensers.
 - · Never keep in service past recommended



dispensing fuel. Never use sparking or flaming devices within 20 ft / 6.1 m of dispensers.



Never use power tools near dispensers or to aid in the installation process.



Never use cell phone within 20 ft / 6.1 m of dispensers.

IMPORTANT SAFETY INSTRUCTIONS - SAVE THESE INSTRUCTIONS IN A READILY ACCESSIBLE LOCATION

LIMITED WARRANTY & DISCLAIMER

LIMITED WARRANTY & DISCLAIMER: Except with respect to goods (or components thereof) manufactured by others, Husky® (the seller), warrants, for a period of one (1) year following shipment, only that the goods and/or services described herein (the "goods") are free from defects in workmanship performed by the seller that exist at the time of shipment of the goods by the seller. All warranty claims must be made within one (1) year after the seller has shipped the product. The seller's liability hereunder is limited to the purchase price of any product proven defective or, at the seller's option, to the replacement of such product F.O.B. the seller's home office.

It is understood and agreed that the seller's liability and purchaser's sole remedy, whether in contract, under any warranty, in tort (including negligence), in strict liability or otherwise shall not exceed the return of the purchase price paid by purchaser, and under no circumstances shall seller be liable for any special, incidental or consequential damages, including, but not limited to, personal injury, property damage, damage to or loss of equipment, lost profits or revenue, cost of renting any replacement or any other additional expenses, even if seller has been advised of the possibility of such damages. The price stated for the equipment is a consideration in so limiting seller's liability and purchaser's remedy. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. The law of the State of Missouri shall apply to any resulting agreement with respect to a sale of the goods.

Seller will not be liable for any damages, losses or expenses as a result of the negligence of the purchaser or any user, whether deemed active or passive and whether or not any such negligence is the sole case of any such damage, loss or expense.

This warranty is in lieu of and excludes all other warranties, expressed, implied, statutory or otherwise created under applicable law. Including, but not limited to, the warranty of merchantability and the warranty of fitness for a particular purpose. In no event shall the company be liable for special, incidental or consequential damages, including loss of profits.

As to goods (or components thereof) sold by the seller but manufactured by others, the buyer shall accept in lieu of any liability, quarantee, or warranty from the company, the benefits of any quarantee or warranty obtained by the seller from the manufacturer thereof. This information is furnished solely to notify the buyer that they may be covered by a warranty from the manufacturer. The seller is not adopting or assuming responsibility for the manufacturer's warranty, and is not making any other expressed or implied warranty including, but not limited to, warranties of fitness for a particular purpose or of merchantability concerning these goods.

Husky Corporation • 2325 Husky Way • Pacific, MO 63069 • Phone: (800) 325-3558 • Fax: (636) 825-7300 • www.husky.com Page 2