


GRAVITY FEED TANK ON STAND

NOTE:

IT IS HIGHLY RECOMMENDED THAT YOU DO NOT TIGHTEN THE BOLTS UNTIL FULLY ASSEMBLED, BUT PRIOR TO SETTING THE TANK ON TOP.

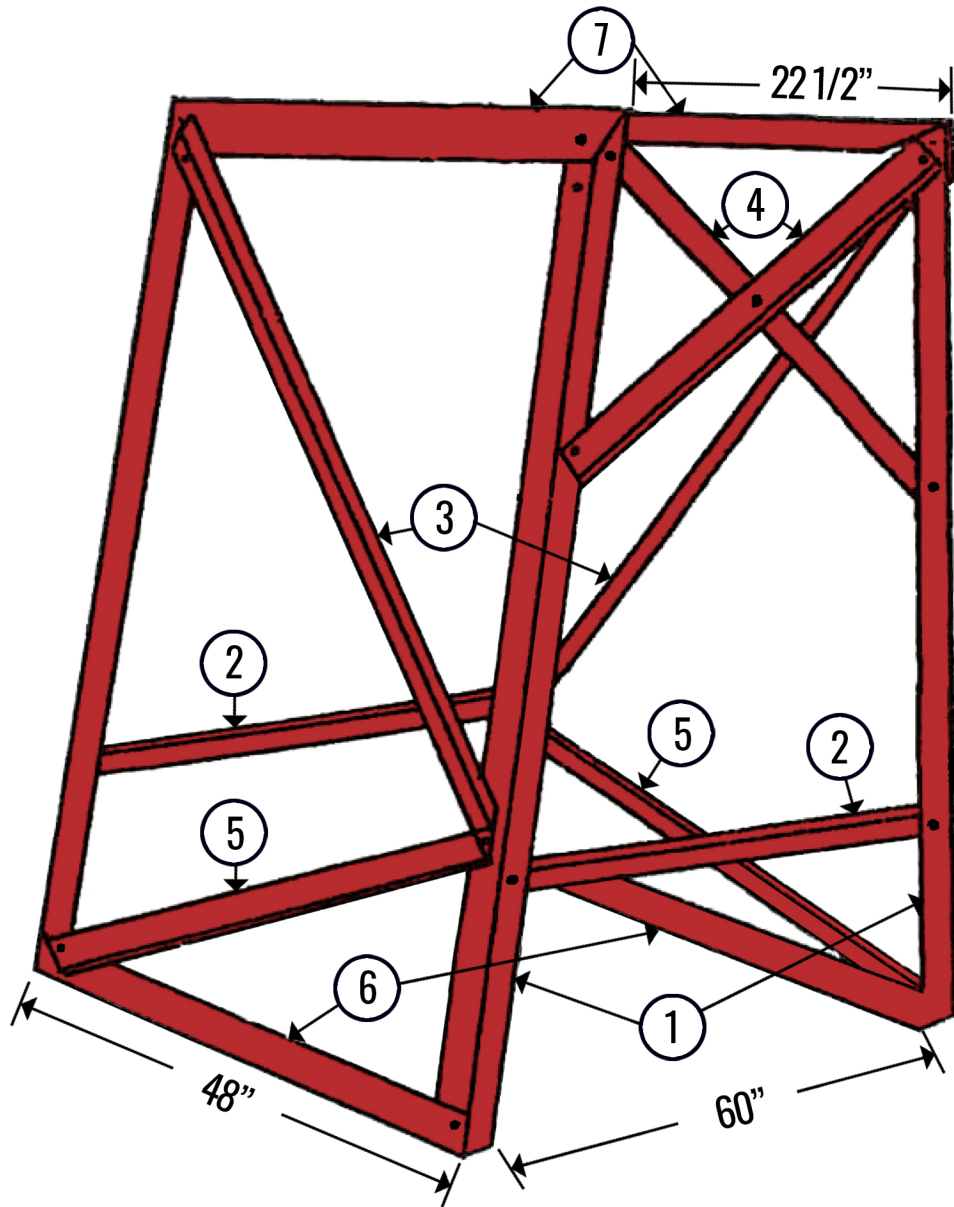

PART NO.	QTY.	PART NAME	SIZE
1	4	LEG	1 1/4 X 1 1/4 X 1/8 X 84"
2	2	LOWER END BRACE	1 1/4 X 1 1/4 X 1/8 X 42"
3	2	LOWER SIDE BRACE	1 X 1 X 1/8 X 78"
4	4	UPPER END BRACE	1 X 1 X 1/8 X 36"
5	2	LOWER SIDE BRACE	1 X 1 X 1/8 X 50 1/2"
6	2	BOTTOM SIDE BRACE	1 1/4 X 1 1/4 X 1/8 X 46"
7	2	TOP BRACKET	2 X 2 X 49"
8	26	BOLTS - HEX HEAD	5/16" X 1/4"
9	26	NUTS - HEX	5/16"



A John M. Ellsworth Company

John M. Ellsworth Co., Inc.

P.O. Box 240072
8700 West Bradley Road
Milwaukee, WI 53224

800-333-3331 **PHONE**
info@jmesales.com **E-MAIL**
www.JMESales.com **WEB**