


1. WIRING

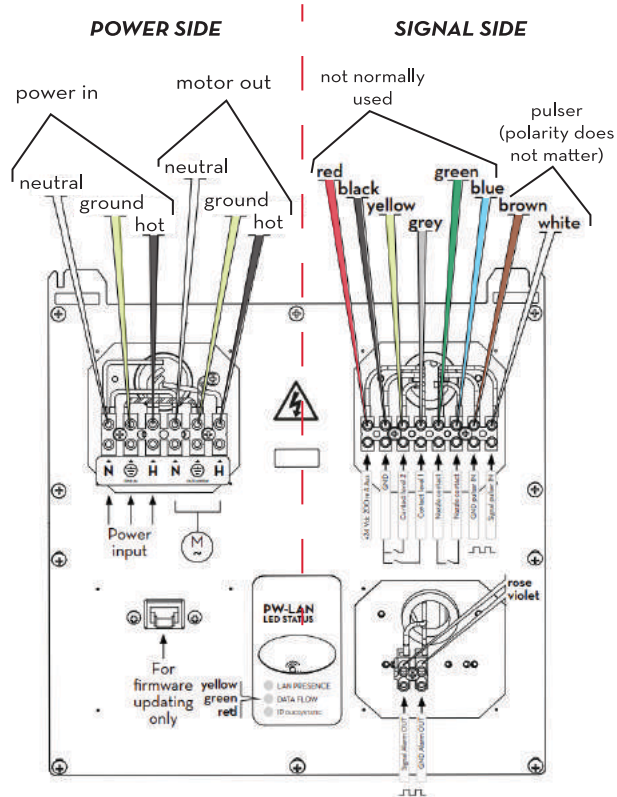

2. PRE-INSTALL CHECKLIST

Before beginning the software install please verify the following information:

- You must have FULL ADMINISTRATOR RIGHTS AND PRIVILEGES to your computer.
- You must have your Anti-Virus software turned OFF (DISABLED) on your computer.
- You must have your Windows Operating System current and up-to-date on your computer.
- Please note that the Self Service Software does NOT work with Apple or MAC operating systems.

3. INSTALLING THE SOFTWARE



1. Take the Piusi USB drive and plug it into an available USB port.
2. Open the USB drive. This can be found under "This PC"/"My Computer."
3. Right click on setup.exe (RUN AS ADMINISTRATOR).
4. Follow instructions of setup to completion of installation.

4. MANAGER KEY SETUP



Launch Self Service Management 1.5
Make sure key reader is plugged into available USB port

1. Click on Settings.
2. Click on "Manager Key" (Key Fob Icon).
3. Plug in key reader into available USB port.
4. Push in manager key (gray key) into key reader.
5. A notification will pop up indicating that Manager key is plugged in.
6. Click FORMAT then the check mark to continue.
7. Click on "General" (Gear Icon).
8. Change the Unit of measurement to the desired measurement. You will NOT be able to change this value after the first dispense has been transferred.
9. Click on the check mark to save changes.
10. Unplug the gray manager key.

5. MC BOX DATE AND TIME CONFIGURATION

The following steps are done directly on the MC Box

1. Next update the date and time on the MC Box.
2. Press Enter, then enter default manager code: 1-2-3-4-5-6.
3. Scroll to System. Press right arrow.
4. Scroll to Date. Press enter.
5. Use arrows to navigate through date and keypad to change according, Press enter when done.
6. Scroll to Time. Press right arrow.
7. Use arrows to navigate through time and keypad to change according, Press enter when done.
8. Press cancel to back out of system.

6. EXPORT MC BOX CONFIGURATION

1. If not manager account please log back into manager. (default pin 1-2-3-4-5-6).
2. Scroll to lbutton. Press right arrow.
3. Will ask to touch key. Touch manager key onto key reader.
4. Will prompt question to export config. Press enter. (Only need export configuration for now).
 - When you need to export transactions you will hit down on the arrow and export that as well.
5. Hold manager key to key reader until all data is transferred. (May have to move key a little)
6. Once exported, press cancel until back to standby mode (driver pin screen).

The following steps are on the
Self Service Management Program

7. Plug manager key into key reader.
8. Software will automatically take data from manager key.
9. Click on the Site. The MC Box 1.5 will be added now (if not displaying MC Box, close and open software)

7. ADD FLUIDS

The following steps are on the
Self Service Management Program

1. Select the FLUIDS tab to add a fluid.
2. Click the ADD (+) button
3. Choose color if desired.
4. Add fluid name and click the check mark to save.
5. If planning to track fuel costs, you must add a supplier in the FLUIDS tab.
6. Click on (+) next to suppliers. (Suppliers is on the right side)
7. Fill in all the information requested and check mark.

8. ADD TANK

The following steps are on the
Self Service Management Program

1. Click on TANK WATCHDOG to add a tank, and then click on ADD NEW TANK.
2. Fill in the tank name, capacity, and the location fields. (Location field is optional)
3. Choose a fluid, and click on the check mark to save.
4. The Tank will show itself as empty and you will need to add fuel to it for virtual tracking. (This is an estimate based on transactions and how proper calibration is set up for the dispenser)
5. Click on newly created tank, click on the check list.
6. The up arrow with the line is for loading with a cost.
7. The 3 line icon is for adjusting the tank to correct known level without cost.
8. The down arrow with the line is for unloading without a cost.
9. If you forgot to load up the tank or wonder what happens if the tank gets to 0, it'll just show an icon on the tank as a warning indicator.
*IT WILL NOT STOP THE DISPENSER FROM PUMPING IF THE TANK IS EMPTY.

9. CONFIGURE MC BOX

1. Click on SITE, then click on EDIT.
2. Select an associated tank. This is required in order to write information to the manager key.
3. Select all of your other settings you wish to change, make sure the manager key is plugged in. Click the check mark to write the changes to the manager's key.
4. Next update the configuration on the MC Box. Touch Managers Key, then enter default manager code: 1-2-3-4-5-6. Touch Key again then import configuration.

10-1. ADD DRIVERS



1. Click on DRIVERS, then click the ADD (+) button.
2. Alias, Given Name, Family Name, lbutton, Pincode MUST be filled in. everything else is optional. (If not running Driver key than put any 7 digits/characters in lbutton Code)

If using driver key, to do lbutton code follow these steps:

2-1. If using driver key, to do lbutton code, plug in driver key into key reader.

2-2. Click the red circle on the lbutton code and it will automatically write in the lbutton code.
5. Click on the check mark to save the driver profile.
6. After the driver profile has been added, click on SITE.
7. Click the EDIT button on specific MC Box, then click on the DRIVERS (Right side).
8. Check in the drivers you want to add by clicking them (Should fill with a checkmark).
9. Click the check mark to save the changes.
10. Make sure the manager key is plugged in.
11. Click the check to write the changes to the manager key.

10-2. ADD DRIVERS CONTINUED

The following steps are done directly on the MC Box

1. Next update the configuration on the MC Box.
2. Touch Managers Key, then enter default manager code (1-2-3-4-5-6).
3. Touch Key again then import database.

11. CALIBRATION

The following steps are done directly on the MC Box

1. Log in as Manager.
2. Scroll to Calibration. Press right arrow.
3. Scroll to Edit/ Dispense Mode. Press right arrow, pump will turn on.
4. Start dispensing into know volume container (5 gallon container recommended).
5. Press stop when done pumping.
6. Adjust to corrected level, use keypad to enter numbers.
7. Repeat to ensure correct level as needed.
8. Export configuration and transactions off the box (refer to MC Box Configuration).

For an in-depth, step-by-step tutorial on how to set up your MC Box 1.5 and Self Service 1.5 Software, scan the QR code below, or visit www.piusiusa.com and click on the "HOW-TO VIDEOS" section under the ABOUT US tab.



CERTIFIED
ISO 9001/ISO 14001

SINCE 1953, PIUSI HAS BEEN PUTTING ITALIAN ENGINEERING PROWESS TO THE SERVICE OF ITS CUSTOMERS, WITH THE NECESSARY PROFESSIONALISM AND INTEGRITY TO BUILD STABLE, LONG-LASTING RELATIONSHIP.

OUR MISSION IS TO PROVIDE SIMPLE, INTELLIGENT, PROFESSIONAL-QUALITY SOLUTIONS FOR THE TRANSFER, DISPENSING AND MEASUREMENT OF LUBRICANTS, FUELS AND LIQUIDS, WITH FULL CONSIDERATION FOR HUMAN AND ENVIRONMENTAL HEALTH.



PIUSI USA
3901 Anglers Avenue
Fort Lauderdale, FL 33312
tel: 954-584-1552

Email: warranty@piusiusa.com



MC BOX 1.5 QUICK GUIDE

