


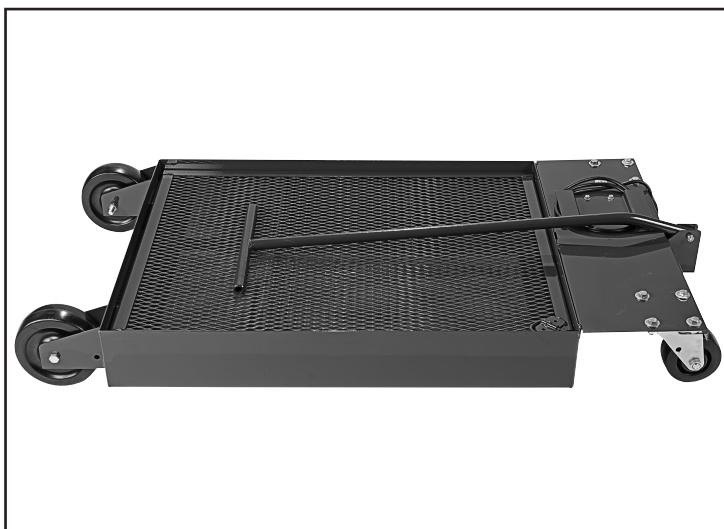

10-Gallon Low Profile Portable Antifreeze Drain

With Electric Evacuation Pump

**Model JDI-AF10E
Owners Manual**



JDI-AF10E Assembly & Operating Instructions

Component Check List

Your portable drain was shipped with the following components. Please be sure you receive them as listed below. Contact us if anything is missing.

Item No.	Description	Qty
1	Low Profile Drain	1
2	115v Pump	1
3	1/2" x 7" Outlet Hose	1
4	1/2" x 10' Evacuation Hose	1
5	1/2" Female Quick Disconnect Coupler	1
6	1/2" Male Quick Disconnect Coupler	1

Assembly:

1. Thread the 1/2 male quick disconnect coupler onto the 7" outlet hose that extends from the pump.
2. Thread the 1/2" female quick disconnect coupler onto one end of the 10' evacuation hose.

(Note: The evacuation hose can be stored separately from the drain until the drain needs to be emptied.)

Operating:

1. Roll the drain under the vehicle to be serviced and drain the fluid.

To empty:

1. Position the drain next to the used oil receptacle.
2. Attach the 10' evacuation hose to the outlet hose using the quick disconnect coupler.
3. Put the opposite end of the evacuation hose securely into the storage receptacle.
4. Plug the electric pump into a 110v outlet to start.
5. When empty, unplug the pump and disconnect the evacuation hose.

Note: To completely empty the drain it may be necessary to slightly elevate the back end of the drain so the remaining fluid flows to the outlet port in the front.

For Service Assistance • Call Toll Free 1-800-433-0708