



1

Insert
the PDC.

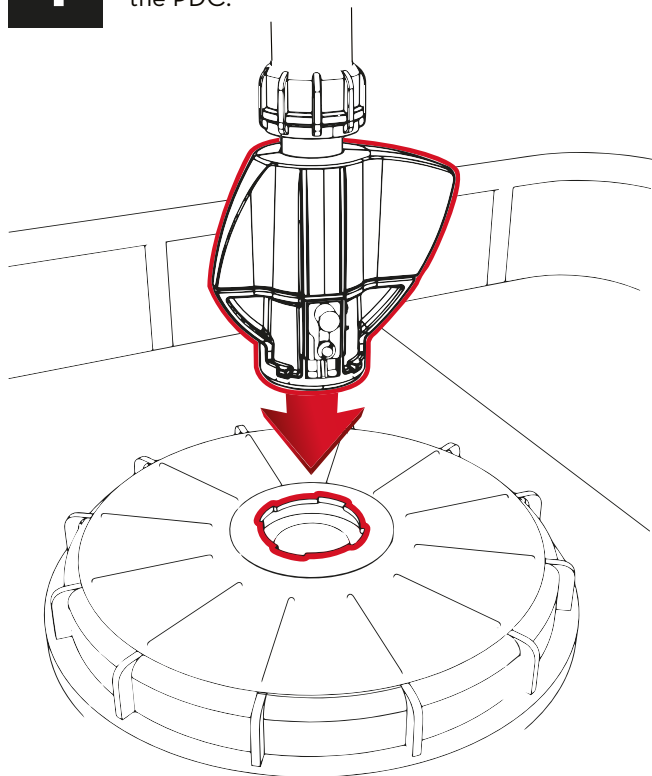

2


Turn the black top and stainless base together clockwise until tight.

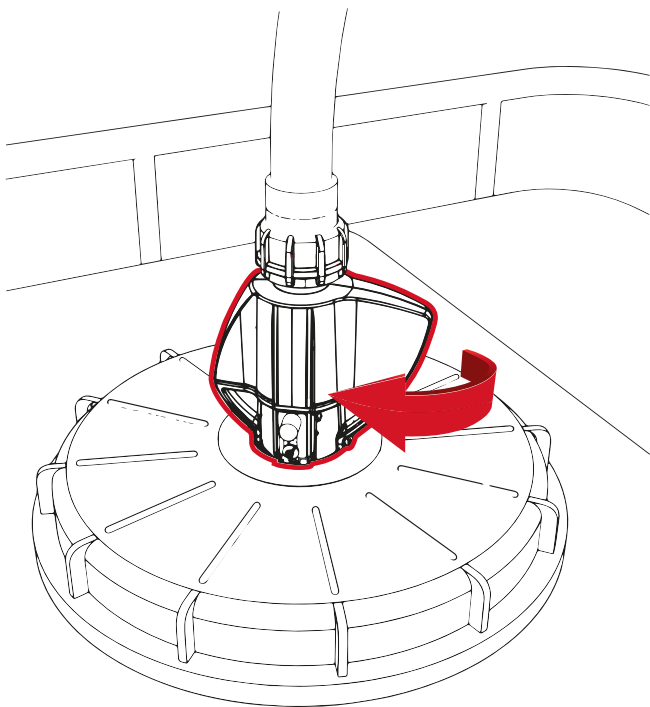

cod. F1891000A


3

Move the red slider
as per arrow.

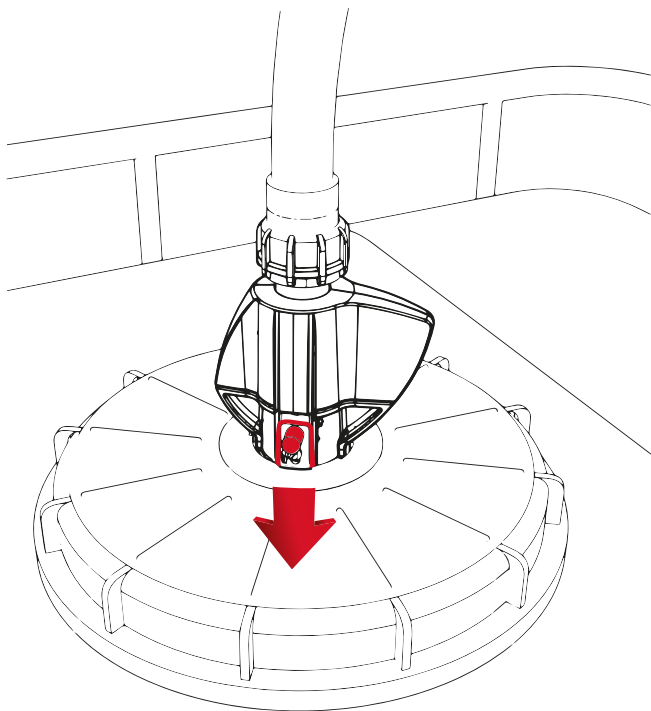

4

Turn only the black top counter-clockwise for 360° until aligned tightly with the stainless base.

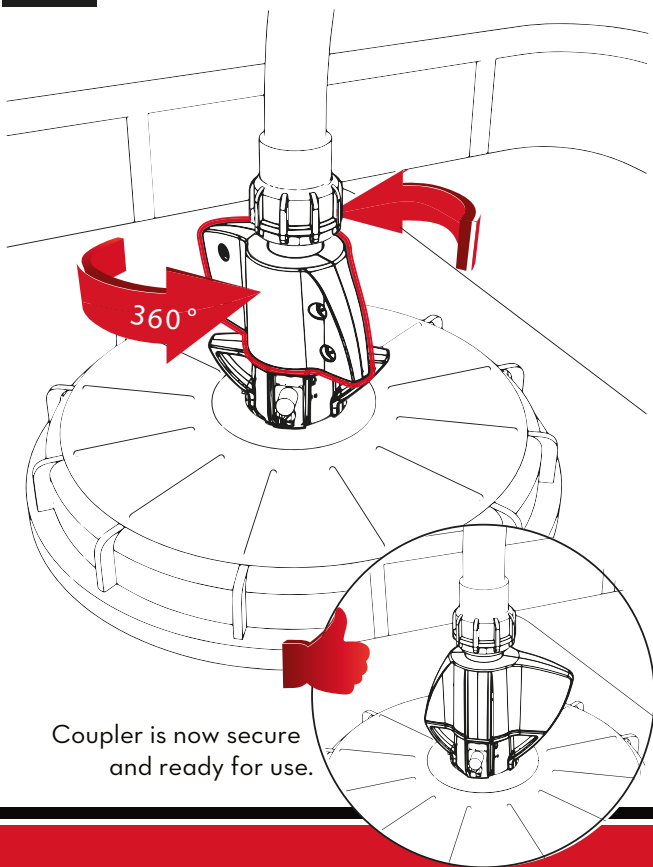

Coupler is now secure
and ready for use.

cod. F1891000A