# SANI-LAV COLUMBIA PRODUCTS

## **Operating Manual for Hands-Free Floor Mount Stainless Steel Sink**

Models 501L and 501L-0.5





Columbia does not recommend use with harsh chemicals.

## **Product Compliance**

NSF/ANSI 2 Food Equipment, NSF/ANSI 372 Low-Lead





#### **Parts List**

- (1) Sink bowl
- ☐ (1) Pedestal base
- ☐ (6) Nuts and washers to attach bowl to pedestal base
- $\square$  (1) Double foot pedal valve
- ☐ (2) Valve mounting nuts
- (1) Swivel gooseneck spout with aerator
- (1) Connecting tubes for valve to spout connection
- ☐ (2) Fittings, brass, 0.375" male compression and 0.375" male NPT
- ☐ (1) Strainer assembly with basket

## **Tools Required**

- ☐ Tape measure
- ☐ Adjustable wrench
- ☐ Drill motor and drill bits
- ☐ Pipe wrench
- □ Level
- ☐ Safety glasses
- ☐ Screw drivers: phillips and standard
- □ Pencil
- ☐ Socket wrench

#### Installation Instructions

#### Step 1

- Set the pedestal base upside down and remove bolts from under pedestal base bridge keeping the black shimmy in place.
- Attach double foot pedal valve as shown in illustration A using the provided nuts keeping the black shimmy in place.
- 3. Do not over tighten nuts.
- 4. Install elbow fitting onto the double pedal valve.

#### Step 2

- 1. Install strainer assembly.
- Attach bowl to pedestal base by slipping bolts on bowl through openings on pedestal base as shown in illustration B.
- 3. Tighten the 6 nuts to the threaded bolts under bowl. Do not over-tighten. There are 6 bolts that will securely hold the bowl in place.

### Step 3

- 1. Place sink at the desired location.
- 2. Mark the floor where the four holes are at the pedestal base as shown in illustration C.
- 3. Drill holes as required for mounting hardware (Hardware not included).

#### Step 4

- 1. Install spout assembly to the sink.
- 2. Install elbow fitting (provided) to the spout assembly.
- 3. Connect one side of the supply line (provided) to the spout assembly.
- 4. Attach connecting tube from the spout to valve.

## Step 5

- 1. Mount pedestal sink to the floor.
- 2. Connect waste line to strainer assembly.
- 3. Connect water supplies (hot and cold) onto the double foot pedal valve.

## Step 6

- Remove aerator from the spout assembly and flush water line by pressing each pedal for 30 seconds.
- 2. Check connections for leaks. Replace aerator onto the spout assembly.

Go to columbiasinks.com for more information on replacement parts and installation videos.



Illustration A

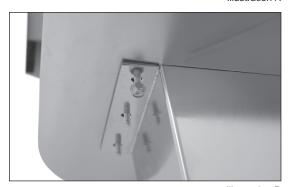


Illustration B



Illustration C



#### Notice for California Consumers

WARNING: This product can expose you to chemicals including Chromium (hexavalent compounds),

Lead, and Phthalates (DEHP) which are known to the State of California to cause cancer and birth defects
or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

NOTE: Lead content originates from Brass components in valves and faucets and is certified under NSF/ANSI 372 as containing less than 0.25% lead in wetted surfaces.

COLUMBIA PRODUCTS
800.626.2117 • columbiasinks.com • info@columbiasinks.com

## **Trouble Shooting Guide**

Problem	Possible Cause	To Diagnose	Remedy
Water drips from spout or valve stem assembly.	Flat washer on the stem/plunger is worn.	To determine if the leak source is from the hot or cold side shut cold water source off. See if water still leaks from the spout. If leak continues then repair hot side if not repair cold side.	We recommend installing valve repair kit.
Water leaks from the front of the valve.	O-Rings on the plunger are worn out.	Visually determine whether the cold or hot side is leaking.	We recommend replacing threaded insert, plunger assembly & spring. See illustrations below.

## **Valve Repair Instructions**

Note: Valves are designed to be repaired without having to be disconnected from mount or plumbing.

- 1. Turn off water source. Do not remove valve from sink.
- 2. Remove pedal assembly using a 15/16" open end wrench or socket wrench. As shown in illustration A.
- 3. Using a 1" deep socket wrench remove insert assembly parts as show in illustration B.
- 4. Replace with new repair kit as shown on illustration C.
- 5. Reinstall pedal assembly and turn water source on.



Illustration A

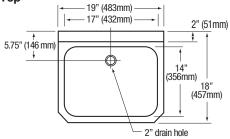


Illustration B

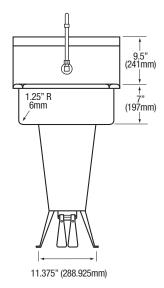



Illustration C






## ■ Front




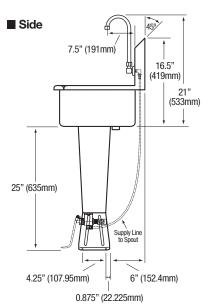


## **■** Hole Configuration

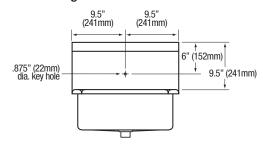


## ■ Floor Mounting Detail

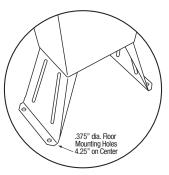


## ■ Supply Line Detail

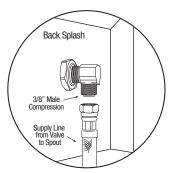

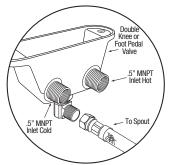

## ■ Plumbing Detail

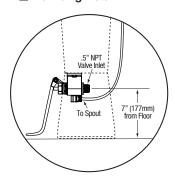

# **Replacement Parts**

	Part No.	Description	Application			
Α	1041	Operated, Long Foot	103/104/105/106 (S) (L)			
В	1042	Operated, Short Foot	101/102 (S) (L)			
C	1043	Operated, Knee	109/110/111/112 (S) (L)			
D	1049	Bolt & Nut Set (Stainless)	All Single Valves			
E	1050	Jam Nut (Stainless)	All Valves			
F	1051	Bolt & Nut Set (Stainless)	All Double Valves			
G	1052	Bracket	All Double Valves			
Н	1053	Threaded Insert (Low Lead)	All Valves			
1	1053S	Threaded Insert (Stainless)	All Valves			
J	1054	Bracket	All Single Valves			
K	1055	Plunger Assembly (Low Lead)	All Valves		1/2" NPT Inlets	
L	1055S	Plunger Assembly (Stainless)	All Valves			
M	·	Spring (Stainless)	All Valves			
N		Body only, Double Valve (Low Lead)				
0		Body only, Single Valve	All Single Valves		0	
P		Replacement Kit (Low Lead)	All Valves			
Q	1061S	Replacement Kit (Stainless)	All Valves		M	
<u>D</u>	ouble Kn	ee or Foot Pedal  B  Single Knee	or Foot Pedal	F	P 1061L Replacement Kit includes one each: 1053L, 1055L, 1056L  Q 1061S Replacement Kit includes one each: 1053S, 1055S, 1056S  P Q K L  H I	1/2" NPT Inlet
					COLUMBIA PRO	

800.626.2117 • columbiasinks.com • info@columbiasinks.com

## **Care and Maintenance**

Regular cleaning will preserve the appearance and integrity of the surface. Stainless steel can easily be cleaned and kept stain-free using various methods.

#### **Recommendations:**

- Clean with an abrasive cleaner like, Bon-Ami or Zud weekly or bi-weekly. Always scrub in the direction of the grain or polish lines. Another option is to use Baking soda. Make sure to rinse well and dry. Illustration A
- Most soaps and detergents contain chlorides, we recommend rinsing the stainless-steel sink with hot water after use, to prevent corrosion. Illustration B
- · Regularly dry your sink to prevent water and surface rust marks. Illustration C
- Do not leave salt in the sink or near a saltwater environment.
- Use a quality stainless steel cleaner and follow cleaner instructions. Wipe along the grain (NOT against). Illustration D

#### Things to Avoid:

- · Avoid harsh abrasive cleaners and corrosive chemicals.
- Avoid abrasive scouring pads, carbon steel brushes and steel wool for cleaning as iron particles left behind can lead to rust.
- Avoid the use of oily rags or greasy cloths when wiping the surface. To avoid water spots, wipe dry after use.

#### **Additional Tips:**

- Regularly drying your sink works wonders to prevent water and surface rust marks.
- Wear rubber gloves when working with cleaners to protect your hands.
- Never mix cleaners. Some products react to create dangerous gases.
- There are thousands of blended or compound cleaners on the market. Users are advised to contact suppliers of solvents for information on their applications on stainless steel.
- DO NOT USE SOLVENTS in closed spaces or while smoking.
- Note: Columbia does not recommend use with harsh chemicals.



Illustration A



Illustration B



Illustration C

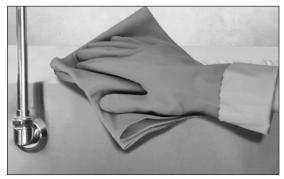


Illustration D